


LL300N – Quick Card



The unit always powers up in automatic self-leveling mode.
When set up vertically it automatically changes into manual mode.

Slope Change in Manual Mode
Up + Down for Y-Axis
Right + Left for X-Axis

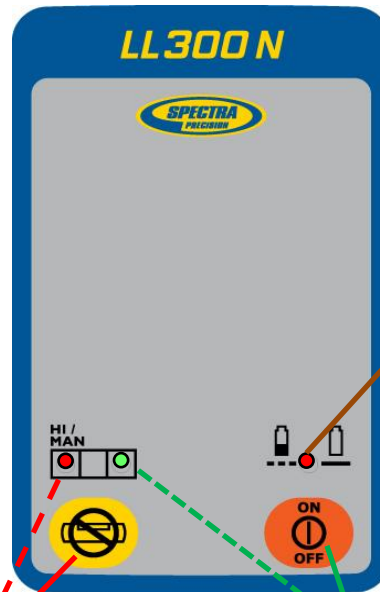

Battery-LED
flashing once a second - batteries low
solid red – replace/charge batteries

Manual Mode On/Off
Red Manual-LED flashes
once a second

Short Press → On/Off
Green LED flashes during self-leveling; then solid for 5 minutes, then flashes every 4 seconds

LL300N – Single Axis Slope Mode



Single Axis Slope Mode is only accessible when set up horizontally.
Single Axis Slope Mode can only be performed using the optional remote control RC601.

Single Axis Slope Mode Y-axis

At the **RC601** press and release the **Manual**-button twice
(red + green LEDs flash simultaneously once a second)
RC601 Up + Down Arrow buttons change slope



Manual-Button
Short press to resume
automatic self-leveling mode

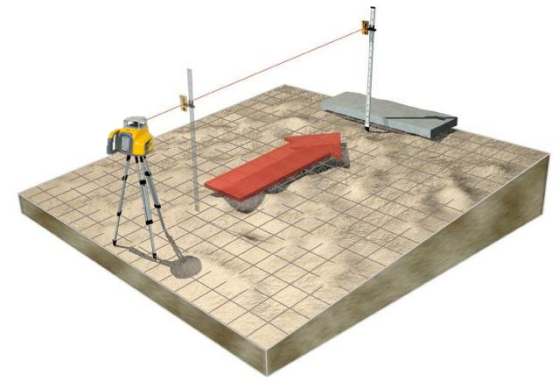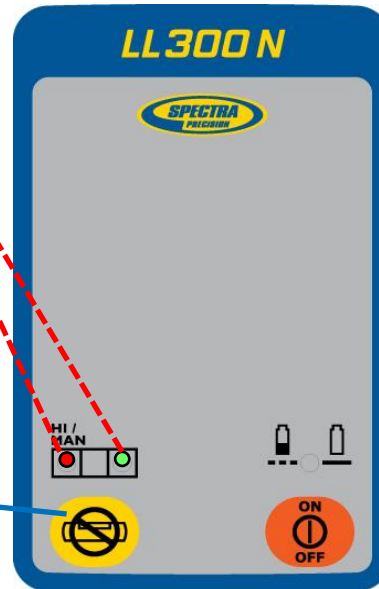

IEC/EN 60825-1: 2001,
max. 3.0 mW, t < 0.25 sec, 630 –680 nm
LASER LIGHT DO NOT STARE INTO BEAM
CLASS 2 LASER PRODUCT
CDRH 21 CFR 1040.10 AND 1040.11

Trimble Spectra Precision Division
5475 Kellenburger Road
Dayton, Ohio 45424
U.S.A.
Toll Free +1-888-272-2433